



Made in Estonia, EU

info@huum.eu
huum.eu
#huumsauna

HUUM OÜ.
Vinkli 2, Tartu,
51014, Estonia

EE Veesärk

- Veesärgi paigalduseks peab olema HUUM HEAT/WOOD keris paigas. Samuti ei tohi kerises olla kivid
- Aseta Veesärk sinu valitud küljele (tagaserv või külgmised servad).
- Veesärk peab istuma kolmnurkse vinkli peale, tihkelt kerise vastu.
- Veesärgi ühendamisel veega ja täites võret kividega tuleb jälgida, et soojusvaheti jääks tihedalt vastu küttekollet.
- Veesärgi töötamise eelduseks on veemahuti asetsemine kõrgemal kui soojusvaheti toruühendused. Veetoru minimaalne läbimõõt $\frac{3}{4}$ ". Toru kalded ei tohi võimaldada "õhumullide" kinni jäämist tsiruklatsiooni.
- Garantii 24 kuud, ostutseki alusel. Garantii kehtib puudulikule tootele, ei kehti kasutamisest tekkinud kulumisele ja rooste.

Leia ajakohaseim materjal meie kodulehelt www.huum.eu

EN Heat Exchanger

- The HUUM HEAT/WOOD heater must be in place to install the Heat exchanger. Also, make sure there aren't any stones placed in the heater.
- Place the Heat exchanger on the side of your choice (back side or sides edges).
- The Heat exchanger must sit on a triangular angle, firmly against the heater.
- When connecting the Heat exchanger to the water and filling the heater with stones, make sure that the Heat exchanger fits snugly against the stove.
- The Heat exchanger works only if the water tank is placed higher than the Heat exchanger pipe connections. Minimum diameter of the water pipe is $\frac{3}{4}$ ". The inclination of the pipe must prevent the air bubbles to get stuck in circulation.
- The purchase receipt gives the product a warranty of 24 months. Warranty applies to a defective product and does not apply to wear and rust caused by natural use.

Find the latest updates on our website www.huum.eu